

SECURE CAN TRANSLATOR TOETATUD
FUNKTSIOONIDE TABEL AUTODE LÕIKES ver_1048

NO	BRAND	MODEL	CODE	LEVEL CAN	LEVEL CANZ	YEAR	NOTE	CENTRAL DOOR LOCKING	TRUNK RELEASE	HAZARD LIGHTS	POWER WINDOWS	BONNET	OEM ALARM	REVERSE GEAR SIGNAL	CAN+ANALOGUE ALARM FUNCTION	SPEED	RPM / L-TERMINAL
327	Nissan	Micra		K13	102	2013->	Version with Keyless Entry.										
328	Nissan	Murano	Z50	58	2002-2008	2013->	Version with Keyless Entry.										
329	Nissan	Murano	Z50	59	2002-2008	2013->	Version without Keyless Entry.										
330	Nissan	Navara			42	2006->	Version without Keyless Entry.										
331	Nissan	Navara			58	2006->	Version with Keyless Entry.										
332	Nissan	NV200			57	2009->											
333	Nissan	Note			41	2006->2012											
334	Nissan	Note II			42	2012->											
335	Nissan	Note II			102	2012->	Version without Keyless Entry.										
336	Nissan	Pathfinder	R51	42	2012->	2012->	Version without Keyless Entry.										
337	Nissan	Pathfinder	R51	58	2005-2012	2012->	Version with Keyless Entry.										
338	Nissan	Pixo			81	2009->											
339	Nissan	Presage	U31	102	2006-2009												
340	Nissan	Primastar			149	2005->											(2)
341	Nissan	Pulsar			172	2014->											
342	Nissan	Qashqai			58	2006-2010	Version with Keyless Entry.										
343	Nissan	Qashqai			42	2010->	Version without Keyless Entry.										
344	Nissan	Qashqai			58	2010->	Version with Keyless Entry. FL										
345	Nissan	Qashqai			172	2014->											
346	Nissan	Qashqai +2			42	2008-2010	Version without Keyless Entry.										
347	Nissan	Qashqai +2			58	2008-2010	Version with Keyless Entry.										
348	Nissan	Qashqai +2			42	2010->	Version without Keyless Entry. FL										
349	Nissan	Qashqai +2			58	2010->	Version with Keyless Entry. FL										
350	Nissan	Serena			102	2005-2010											
351	Nissan	Tiida			41	2006-2011											
352	Nissan	Wingroad			102	2006->											
353	Nissan	X-trail	T31	42	2007->	2007->	Version without Keyless Entry.										
354	Nissan	X-trail	T31	58	2007->	2007->	Version with Keyless Entry.										
355	Opel	Adam			82	2012->	check installation diagram for proper level										
356	Opel	Adam			147	2012->	check installation diagram for proper level										
531	Opel	Adam			164	2014->	check installation diagram for proper level										
358	Opel	Antara			49	2007->											
359	Opel	Antara			160	2011->	Version with keyless entry OEM alarm										
360	Opel	Agila	B	44	2008->	2008->	Version with Keyless Entry.										
361	Opel	Agila	B	81	2008->	2008->	Version without Keyless Entry.										
362	Opel	Astra	H	18	2004-2009	2004-2009											
363	Opel	Astra	J	82	2009->	2009->	check installation diagram for proper level										
364	Opel	Astra	J	89	2009->	2009->	Can-bus control, OBD connection.										
365	Opel	Astra	J	147	2009->	2009->	check installation diagram for proper level										
366	Opel	Astra	J	164	2014->	2014->	check installation diagram for proper level										
367	Opel	Cascada			82	2009->	check installation diagram for proper level										
523	Opel	Cascada			147	2009->	check installation diagram for proper level										
531	Opel	Cascada			164	2009->	check installation diagram for proper level										
531	Opel	Combo	D	14	2011->	2011->											
531	Opel	Combo	D	69	2011->	2011->											
372	Opel	Corsa	D	72	2006->	2006->	3 door										
373	Opel	Corsa	D	18	2006->	2006->	5 door										
374	Opel	Corsa	E	164	2014->	2014->	check installation diagram for proper level										
375	Opel	Insignia			82	2008-2013	check installation diagram for proper level										
376	Opel	Insignia			89	2008-2013	Version with Keyless Entry.										
377	Opel	Insignia			147	2008-2013	check installation diagram for proper level										
378	Opel	Insignia			164	2014->	check installation diagram for proper level										
379	Opel	Karl			164	2014->	check installation diagram for proper level										
380	Opel	Meriva	B	116	2010->	2010->											
381	Opel	Mokka			82	2012->	check installation diagram for proper level										
544	Opel	Mokka			147	2012->	check installation diagram for proper level										
383	Opel	Mokka			164	2014->	check installation diagram for proper level										
384	Opel	Movano			149	2003-2010											
385	Opel	Movano			57	2010->											
386	Opel	Signum			18	2003-2008											
387	Opel	Vectra	C	141	2002-2009	2002-2009											
388	Opel	Vivaro			149	2005->											
389	Opel	Zafira	B	18	2005-2011	2005-2011											
390	Opel	Zafira	C	82	2011->	2011->	check installation diagram for proper level										
544	Opel	Zafira	C	147	2011->	2011->	check installation diagram for proper level										
392	Opel	Zafira	C	164	2014->	2014->	check installation diagram for proper level										
393	Opel	Zafira Tourer	C	82	2011->	2011->	check installation diagram for proper level										
544	Opel	Zafira Tourer	C	147	2011->	2011->	check installation diagram for proper level										
395	Opel	Zafira Tourer	C	164	2014->	2014->	check installation diagram for proper level										
396	Peugeot		207	10	112	2006-2012	Enable OEM alarm function in BSI										
397	Peugeot	208			144	2012->											
398	Peugeot		2008		144	2013->											
399	Peugeot	301			144	2012->											
400	Peugeot		307	10	112	2005-2008	Enable OEM alarm function in BSI										
401	Peugeot	307			112	2005-2008											
402	Peugeot	308			10	112	2007-2013	Enable OEM alarm function in BSI									
403	Peugeot	308			144	2013->	Version without Keyless Entry.										
404	Peugeot		308	165	2013->	2013->	W/keyless.enable OEM alarm function in BSI										
405	Peugeot	3008			10	112	2009->	Enable OEM alarm function in BSI									
406	Peugeot		407	11	2004-2010	2004-2010											
407	Peugeot	4007			40	2007-2011											
408	Peugeot		4007	40	2011-2012	2011-2012											
409	Peugeot	508			10	112	2010->	Enable OEM alarm function in BSI									
410	Peugeot		508	10	112	2010->	W/keyless.enable OEM alarm function in BSI										
411	Peugeot	5008			10	112	2009->	Enable OEM alarm function in BSI									
412	Peugeot	Bipper			69	2007->											
413	Peugeot	Boxer			15	2006-2011											
414	Peugeot	Boxer			69	2011->											
415	Peugeot	Expert			55	112	2007->	Enable OEM alarm function in BSI									
416	Peugeot	Partner II			10	112	2008->	Enable OEM alarm function in BSI									
417	Porsche	911	997	66	2004-2008	2004-2008											
418	Porsche	Cayenne			20	2002-2010											
419	Porsche	Cayenne			77	2002-2010											
420	Porsche	Cayenne			104	2010->	Keyless trunk DO NOT unlock all doors										
421	Porsche	Cayenne			106	2010->	Keyless trunk unlocks all doors										
422	Porsche	Cayman	987	66	2006->	2006->											
423	Porsche	Macan	95B	66	2013->	2013->											
424	Porsche	Panamera			104	2009->	Keyless trunk DO NOT unlock all doors										
425	Porsche	Panamera			106	2009->	Keyless trunk unlocks all doors										
426	Range Rover	Sport			80	2005-2009											
427	Range Rover	Sport			107	2010-2012											
428	Renault	Captur			153	2013->											
429	Renault	Clio II			149	2001-2005											
430	Renault	Clio III GrandTour			51	2008-2012											
431	Renault	Clio III	R	51	2005-2012	2005-2012											
432	Renault	Clio IV	X98	153	2012->	2012->											
433	Renault	Espace IV	JK	25	2003->	2003->											
434	Renault	Espace			194	2015->											
435	Renault	Fluence			50	2009->											

+1 Not applicable to models with 3-conductor only computer module
+2 Mirrors fold together with windows roll-up
+3 Vehicle dependant. Hood opens only in some series of vehicle and only when central lock has been opened
+4 Coded pulse via dedicated wire
(2) engine CAN-bus (ECU engine-ABS) or EOBD (other than comfort CAN-bus)

LISTA MODELI SAMOCHODÓW OBSŁUGIWANYCH PRZEZ ALARM DSxxx-Cxxx-xxxx

- + sygnał dostępny, magistrala CAN-BUS komfort
- +1 sygnał niedostępny w modelach z nowym modułem komputera z trzema złączami
- +2 lusterka składają się równocześnie z domykaniem szyb
- +3 w zależności od pojazdu. Bagażnik zwalniany tylko w niektórych seriach pojazdów i tylko gdy zamek centralny został otwarty
- +4 kodowany sygnał poprzez dedykowany przewód
- (2) magistrala CAN zespołu napędowego (ECU silnik-ABS) lub EOBD (inna niż CAN komfort)
- (3) magistrala Lin, R-bus, K-bus
- (4) sygnał analogowy
- (1+2)
(1+3) sygnał dostępny na różnych magistralach
- [A] paliwo w procentach
- [B] paliwo w litrach
- [C] paliwo w litrach poniżej maksimum

STEROWANIA CAN-BUS	dostępne sygnały pozwalają na wykonywanie poleceń na magistrali
CENTRALNY ZAMEK	sterowanie centralnym zamkiem
ZWALNIANIE BAGAŻNIKA	zwalnianie pokrywy bagażnika
KIERUNKOWSKAZY	sterowanie kierunkowskazami
DOMYKANIE SZYB	sterowanie domykaniem szyb
INFORMACJE CAN-BUS	dostępne sygnały pozwalają na odczytywanie informacji z magistrali
ZAPŁON	sygnał stacyjki
DRZWI	sygnały drzwi
BAGAŻNIK	sygnał krańcówki pokrywy bagażnika
MASKA	sygnał fabrycznej krańcówki maski
ALARM FABRYCZNY	informacja o statusie alarmu fabrycznego
SYGNAŁ BIEGU WSTECZNEGO	sygnał biegu wstecznego
STATUS KIERUNKOWSK.	status kierunkowskazów
ALARM - MAGISTRALA CAN ANALOGOWO	
ALARM - INNA MAGISTRALA	
PRĘDKOŚĆ	
OBROTY / PRACA SILNIKA	
PRZEBIEG	
PRZYROST PRZEBIEGU	
PEDAŁ GAZU	
LAPMKI BŁĘDÓW	
POZIOM PALIWA	
JEDNOSTKA DANYCH PALIWA	
TEMPERATURA SILNIKA	
TEMPERATURA ZEWNĘTRZNA	
IMMO	

