

HIGH-PERFORMANCE CAR- AMPLIFIER

OWNER'S MANUAL



CO-100.2 CO-70.4 CO-75.4 24 V





FEATURES

Congratulation on your purchase of your new C-SERIES amplifier.

<u>IMPORTANT:</u> Before installation your power amplifier, we recommend to read the owner's manual carefully and to follow the instructions regarding connection and fitting exactly.

ATTENTION: Pay attention to advices and instructions of the car manufacturer.

IMPORTANT: Your proof of purchase is evidence of warranty claim for repair or replacement. Keep your proof of purchase, manual and original packaging.

ATTENTION: Use of sound components can impair your ability to hear necessary traffic sounds and may constitute a hazard while driving your automobile.

AUDIO SYSTEMGERMANY accepts no liability for hearing loss, bodily injury or property damage as a result of use or misuse of our products. We recommend installing the equipment by an authorized service center or dealer. A professional fitting and connection is the requirement for further warranty and perfect sound.

CO-100.2

- 2-Channel High Power Class-AB amplifier with SMD technology
- MOS-FET PWM Power Supply
- Stable into 2 ohm stereo per channel and 4 ohm bridged mode
- Variable switchable Low Pass Filter from 30 to 300 Hz
- Variable switchable High Pass Filter from 30 to 300 Hz
- Input Sensitivity: variable 200 mV maximum to 8 V minimum
- Multi-Way Protection Circuitry: overheating, overcurrent, short circuitry and speaker DC protection
- Operating Voltage: DC 10 ~ 16 V power input
- Wired Remote Control RTC (optional)
- High-Power-Input (normally originial radio) with automatically "Turn-On"
- Adaptercable HLAC and RCA HI (optional)

CO-70.4 / CO-75.4 24 V

- 4-Channel High Power Class-AB amplifier with SMD technology
- MOS-FET PWM Power Supply
- Stable into 2 ohm stereo per channel and 4 ohm bridged mode
- Variable switchable Low Pass Filter from 30 to 300 Hz
- Variable switchable High Pass Filter from 30 to 300 Hz
- Input Sensitivity: variable 200 mV maximum to 8 v minimum
- Multi-Way Protection Circuitry: overheating, overcurrent, short circuitry and speaker DC protection
- Operating Voltage: DC 10 ~ 16 V / DC 20 ~ 32 V in CO-75.4 ≥4 ∨ power input
- Wired Remote Control RTC (optional)
- High-Power-Input (normally originial radio) with automatically "Turn-On"
- Adaptercable HLAC and RCA HI (optional)






POWER CONNECTION



CO-70.4 / CO-75.4 24 V

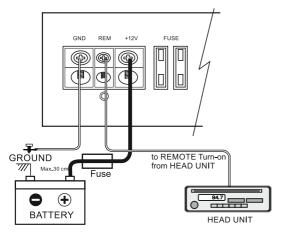

1. Battery disconnection

First disconnect the power supply of the vehicle. This works out the best by removing the ground cable of the battery.

2. Ground connection

Connect the GND (ground) connection of the amplifier with the car chassis. Keep this cable as short as possible (not longer than 50 cm) and use a suitable cross section (AWG sice 8 - 6). Make sure, that the connection with the vehicle chassis is free of paint, dirt and dust.

3. +12 V Power connection (+24 V in CO-75.4 24 V):

Connect the +12 V (+24 V in CO-75.4 24 V) contact of the amplifier with the supply cable via a fuse directly to the vehicle battery. Keep in mind, that the length of the cable from fuseholder to vehicle battery has to be a maximum of 30 cm. Requirement for a perfect function of the amplifier is a qualitative high end fuse holder as well as a suitable cable cross section (AWG sice 8 - 6). This fuse protects the amplifier and the vehicle against the possibility of a short circuit in the power cable.

4. Remote connection

Connect the REM-terminal of the amplifier to the remote-output (automatic 12 V (+24 V bei CO-75.4 24 V) antenna-output) of the head unit. Therefore use a 0,5 - 1,5 mm power cable.

A

ATTENTION




Please follow the instructions during the installation of your amplifier:

- Take care of a professional attachement. Pay attention, that no electrical cable, gas tank, hydraulic breakes or other components get damaged.
- b) There has to be enough cooling and air circulation. Avoid the installation in small closed boxes or close to heatening parts.
- c) Protect the amplifier from fluids, wetness, heat and foreign material as well as from other influences.
- d) The amplifier is only to be built into vehicles with a 12 V DC (+24 V in CO-75.4 ≥4 V) power supply.
- e) Never install the power supply cable with other original wires of the vehicle (gas cables), fan motors, brand control moduls etc.
- f) Install the signal cable (cinch cable) as well as the speaker cable far away of the power cables to avoid troubles with the music signal.
- g) The cables of your amplifier have to be installed, so that there is no danger of binding, squeezing or breaking.



RCA CONNECTION

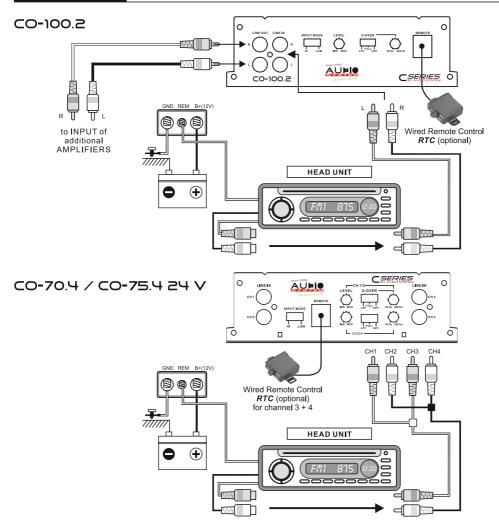

The CSERIES amplifier offers RCA-Inputs, which are connected through cinch cables with the preamplifier-outputs of the head unit. If the head unit (OEM-RADIO) has no RCA-Output, than it is possible to connect the speaker output direct to RCA/Cinch-Input of the amplifier.

The Input Mode has to be switched on "HI". Important: the Gain-Controller has to be adjusted to minimum, then carfully turn up the volume. If signal is presented, the amplifier automatically turns on. Adaptercable IHLAC and RCA IHI can be purchased at your specialized dealer.

With the aid of the variable high- and lowpassfilter, phase shift-controller, the gain-controller and subsonicfilter you are able to adjust the amplifier on to your prefered taste of hearing, the circumstances of the vehicle and to the speakers.

Optional a wire remote controller RTC can be installed to adjust the output level.


In this regard, AUDIO SYSTEM GERMANY recommends to adjust your amplifier through a specialized service center, dealer or a specialist.

SPEAKER CONNECTION




CO-100.2

1-Channel Bridged

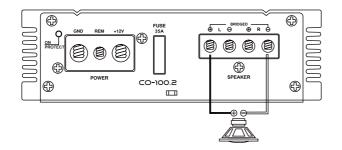


speaker impedance 4 ~ 8 0hm

2-Channel Stereo

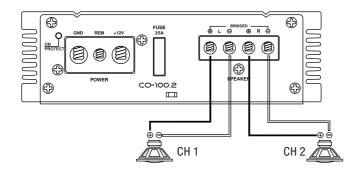

speaker impedance 2 ~ 8 0hm

Tri-Mode

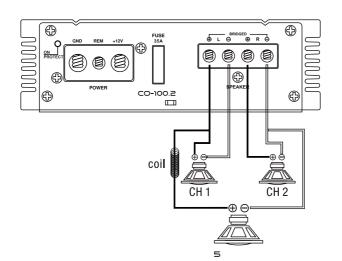


speaker impedance 4 ~ 8 0hm



SPEAKER CONNECTION


CO-70.4 / CO-75.4 24 V

2-Channel Mono

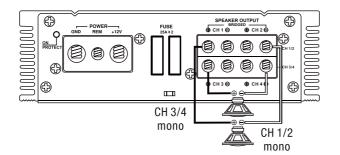


speaker impedance 4 ~ 8 0hm

4-Channel Stereo

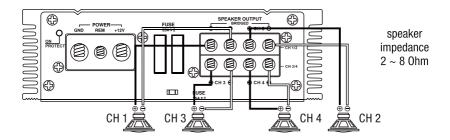

2-Channel Stereo + 1-Channel Mono Bridged

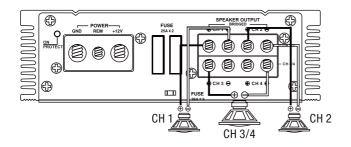

speaker impedance 4 ~ 8 Ohm

TROUBLE SHOOTING



This power amplifier is featured with an efficient protection system to prevent any damages like over-heating, overvoltage, short-circuit and DC at the loudspeaker output.

Occuring an error the protection-LED will light in red. In order to check the problem, first turn down all levels of the head unit, afterwards turn it off.

AMPLIFIER IS NOT POWERED UP, NO LED IS LIGHTENING	 ground connection professional connected? +12V powercable professional connected? remote cable professional connected? fuses inserted and alright? analyze voltage on the amplifier.
PROTECTION LED ILLUMINATES GREEN WHILE AMPLIFIER IS SOUNDLESS	 cinch cable alrith and professional connected loudspeaker professional connected? head unit alright?
PROTECTION LED ILLUMINATES RED WHEN AMPLIFIER IS POWERED UP	 amplifier too hot? short-circuit at the loudspeaker output? short-circuit caused by loudspeaker cable with vehicle chassi (ground)? input voltage too high (e.g.faulty generator)?
OVERHEATING (PROTECTION LED ILLUMINATES RED WHEN AMPLIFIER IS POWERED UP)	- impedance alright? - loudspeaker error? - adequate airflow of the amplifier? ! CAUTION! After cooling down, the amplifier turns on automatically.
	Actor cooming down, the amplitude tarne on automatically.
ERROR IN AMPLIFIER FUSE	- ground professional connected? - loudspeaker impedance alright? ! CAUTION! Make sure when changing fuses to use the same value.
SOUND TOO LOW OR LOW-DISTORTED SOUND	- ground professional connected? - loudspeaker impedance alright? ! CAUTION!

A ATTENTION A

Please contact your specialized dealer if the amplifier is still not working after it has been checked with the error list!

For warranty adjustement / repairs the original invoice has to be attached!

Opening the power amplifier is leading to a lost of warranty in either case!



SPECIFICATIONS

CO-100.2

Power Supply Voltage Rated Power Output at 14,4 V

-RMS power @ 4 ohm stereo

-RMS power @ 2 ohm stereo -RMS power @ 4 ohm bridged

Signal to Noise Ratio

Low Pass Crossover

High Pass Crossover / Subsonic filter

Frequency Response THD@RMS Watts

Channel Separation

Fuse Rating

Input Sensitivity Dimensions

10 - 16 V

2x 100 W

2x 160 W

1x 320 W >96 dB

 $30 \sim 300 \text{ Hz}$

 $30 \sim 300 \text{ Hz}$

10 Hz ~ 45 KHz (+/-1 dB)

< 0.048%

75 dB

35 A x 1

200 mV ~ 8 V (+/- 5%)

240(W) x 47(H) x 171(L) mm

CO-70.4 / CO-75.4 24 V

Power Supply Voltage

Rated Power Output at 14,4 V / 28,8 V

-RMS power @ 4 ohm stereo

-RMS power @ 2 ohm stereo

-RMS power @ 4 ohm bridged

Signal to Noise Ratio

Low Pass Crossover

High Pass Crossover

Frequency Response

THD@RMS Watts

Channel Separation

Fuse Rating

Input Sensitivity

Dimensions

10 - 16 V / 20 - 32 V

4x 70 W / 4x 75 W

4x 110 W / 4x 120 W 2x 220 W / 2x 240 W

>97 dB

 $30 \sim 300 \text{ Hz}$

30 ~ 300 Hz

 $10 \text{ Hz} \sim 45 \text{ KHz} (+/-1 \text{ dB})$

< 0.049%

75 dB

25 A x 2 / 15 A x 2

200 mV ~ 8 V (+/- 5%)

280(W) x 47(H) x 171(L) mm



AUDIO SYSTEM GERMANY FALLTORSTRASSE 6 **-** 76707 HAMBRÜCKEN

DESIGNED AND ENGINEERED BY AUDIO SYSTEM GERMANY



